Uni–Support 175 & 300

Installation Guide

LOFT-TRAC

Before you begin you'll need
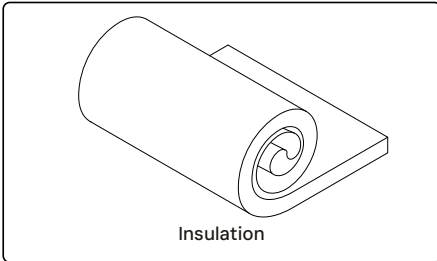
Screwdriver

Screws

Floorboards

Insulation

Loft-Trac Uni-Support 175 or 300

Loft-Trac Steel Cross-Breams (Optional)

Top Plate

Base Plate

Pilot Screw Holes
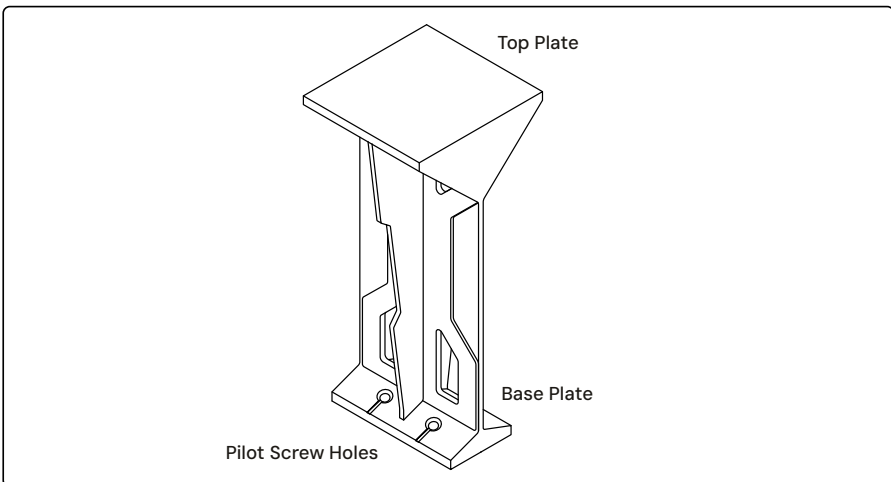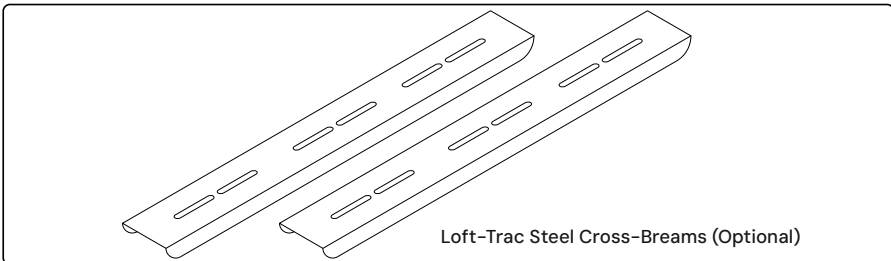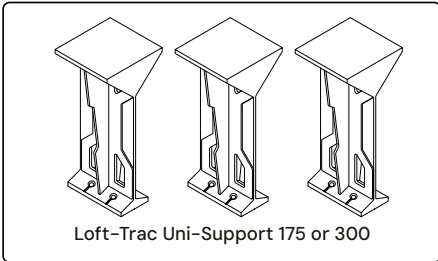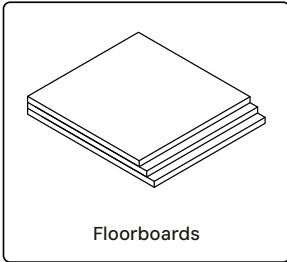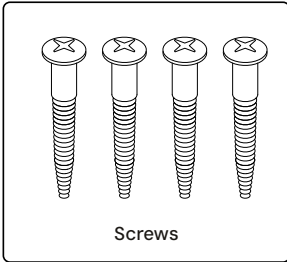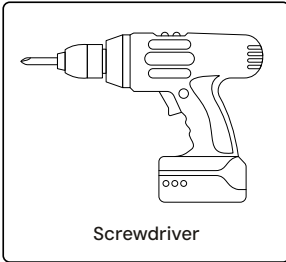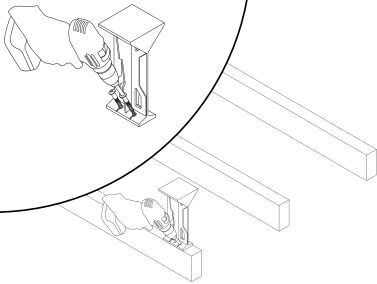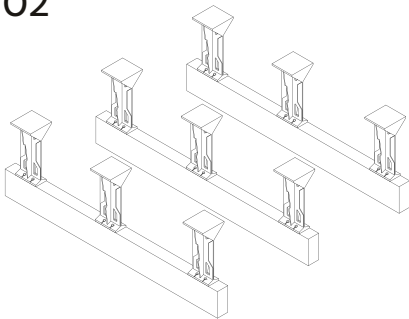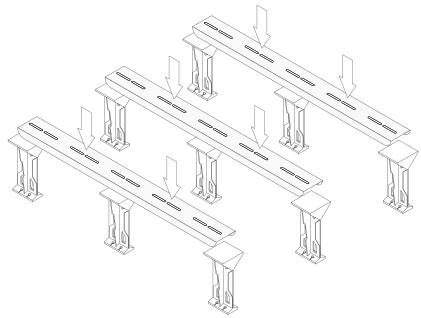
Installation Walkthrough

01

Prepare screws in the pilot holes, then screw uni-support baseplate to joists.
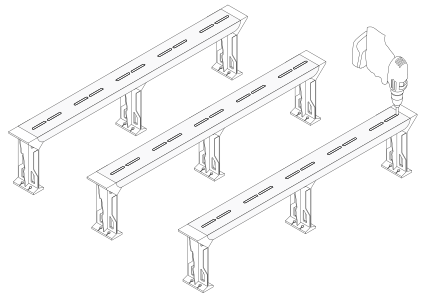
02

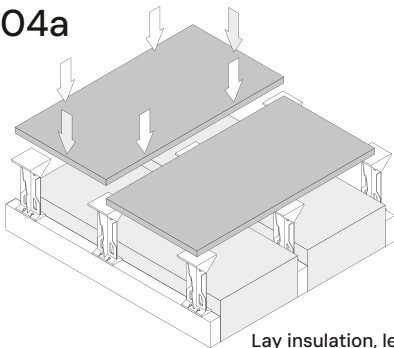Complete laying uni-suppots, spaced out board-width and evenly on joists.

03 (optional)

Attach the steel cross-beams to the uni-support top plates for added support.
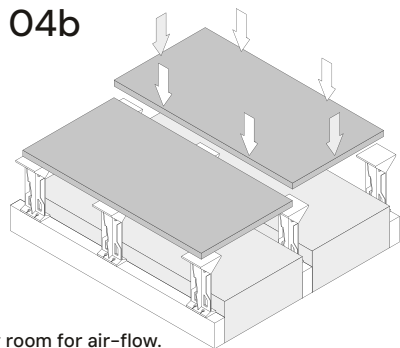
04a

04b

Lay insulation, leaving room for air-flow. Place floorboards and secure in place with screws into the uni-support top plates.

lofttrac.co.uk